

RS

POSTUPAK RUČNOG UPRAVLJANJA ZA MODELE SA SEFOM

1. Otvorite sef.
2. Povucite polugu za deblokadu motora.


⚠ NAPOMENA:

Dok jedan čovek drži polugu pritisnutom, preporuka je da drugi pridrži rolo zastor da slučajno ne bi jačina opruge naglo povukla zastor naviše i "premotala" roletnu.

3. Rukujte rolo zastorom rukom do željenog položaja dok držite pritisnutu polugu.
4. Otpustite polugu.
5. Zatvorite sef.



+

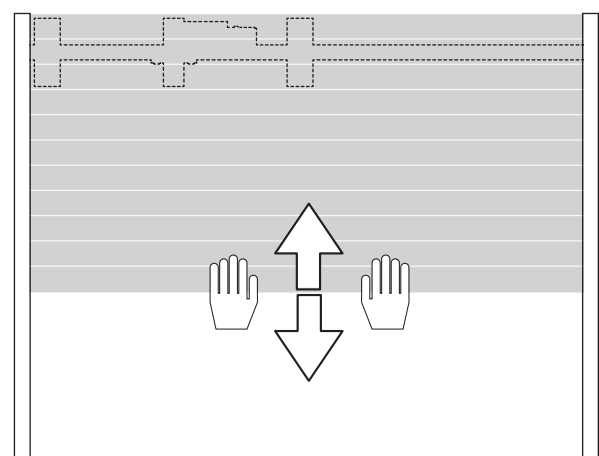

POSTUPAK RUČNOG UPRAVLJANJA ZA MODELE SA RUČNOM KOČNICOM


1. Donji deo ručice kočnice odvrće se u levo (zelena strelica) dok se sajla ne zategne.

⚠ NAPOMENA:


Dok jedan čovek odvrće ručicu, preporuka je da drugi pridrži rolo zastor da slučajno ne bi jačina opruge naglo povukla zastor naviše i "premotala" roletnu.

2. Rukujte rolo zastorom rukom do željenog položaja.
3. Zavrните donji deo ručice kočnice u desno (crvena strelica).

Deblokada

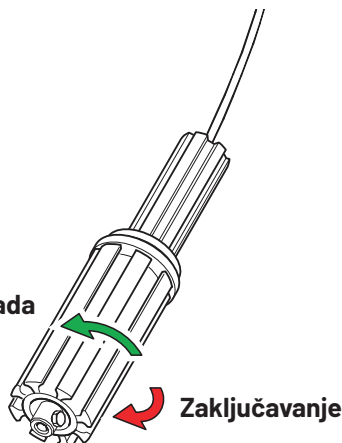

+

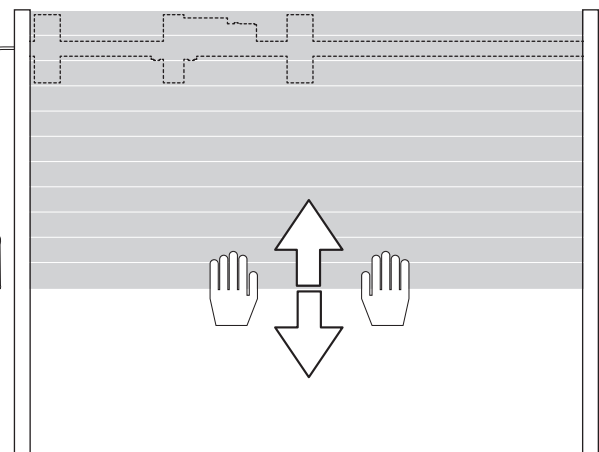

ROLLER SHUTTER MANUAL AND EMERGENCY MANOEUVRE



GB

MANUAL OPERATION FOR MODELS WITH SECURITY BOX (BREAK RELEASE AND PUSH BUTTON)

1. Open the box.
2. Pull the declutching lever.


⚠ CAUTION:

While one person holding the declutching lever pressed, it is recommended that the other needs to hold the roller curtain so that the strength of the spring does not suddenly pull the curtain upwards too much.

3. Handle the curtain by hand to the desired position while holding the lever pressed.
4. Push the lever.
5. Close the box.



+

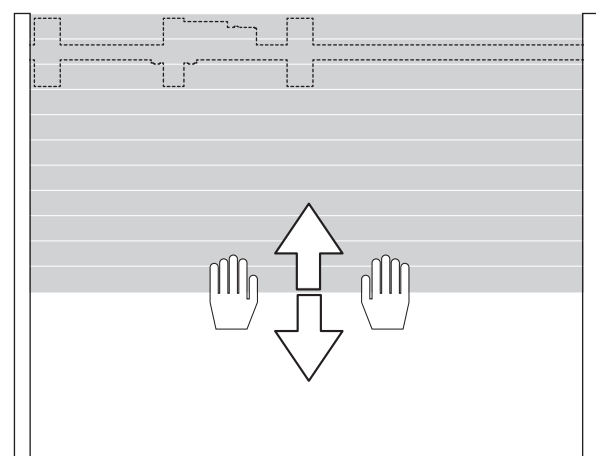


MANUAL OPERATION FOR MODELS WITH ELECTRIC LOCK (PULL CORD AND RELEASING KNOB)

The lower part of the brake lever is unscrewed to the left (green arrow) until the cable is tightened.

⚠ CAUTION:

While one man unscrews the handle, it is recommended that the other needs to hold the roller curtain so that the strength of the spring does not suddenly pull the curtain upwards too much.

1. Handle the curtain by hand to the desired position.
2. Screw the lower part of the brake lever to the right (red arrow).

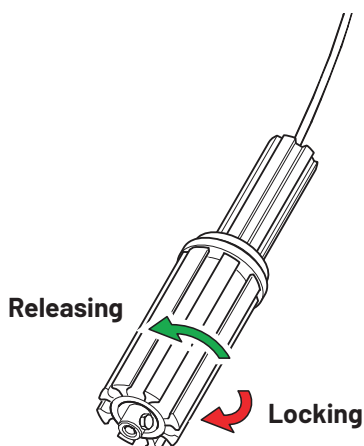

+

